

C66
VoIP Phone

HD
WWW.FANVIL.COM

VoIP Phone C66 Quick Installation Guide



Fanvil

Smart VoIP

This phone can be set through the LCD or web page.
If you own this product to make some VoIP calls, an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.

Check Your Package Contents

These are the items included with your C66 IP Phone purchase:



VoIP Phone C66



Handset



Power adaptor



Handset cord



Quick Installation Guide




Base bracket



Ethernet Cable

2 The Appearance of Product

Front view and keypad function:

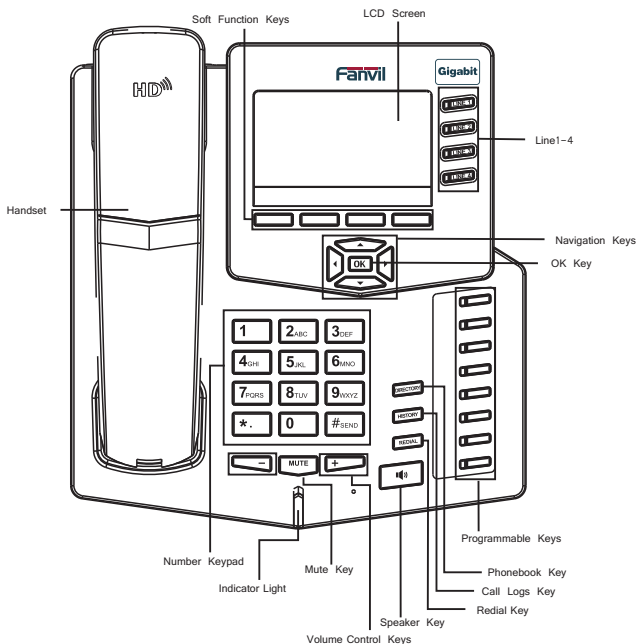


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

Key	Text Mode		Key	Text Mode	
	Normal(ABC)	Numeric(0-9)		Normal(ABC)	Numeric(0-9)
1		1	7 _{PQRS}	PQRSpqrs	7
2 _{ABC}	ABCabc	2	8 _{TUV}	TUVtuv	8
3 _{DEF}	DEFdef	3	9 _{WXYZ}	WXYZwxyz	9
4 _{GHI}	GHIghi	4	0		0
5 _{JKL}	JKLjkl	5	*.		*
6 _{MNO}	MNOmno	6	#SEND		#


3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

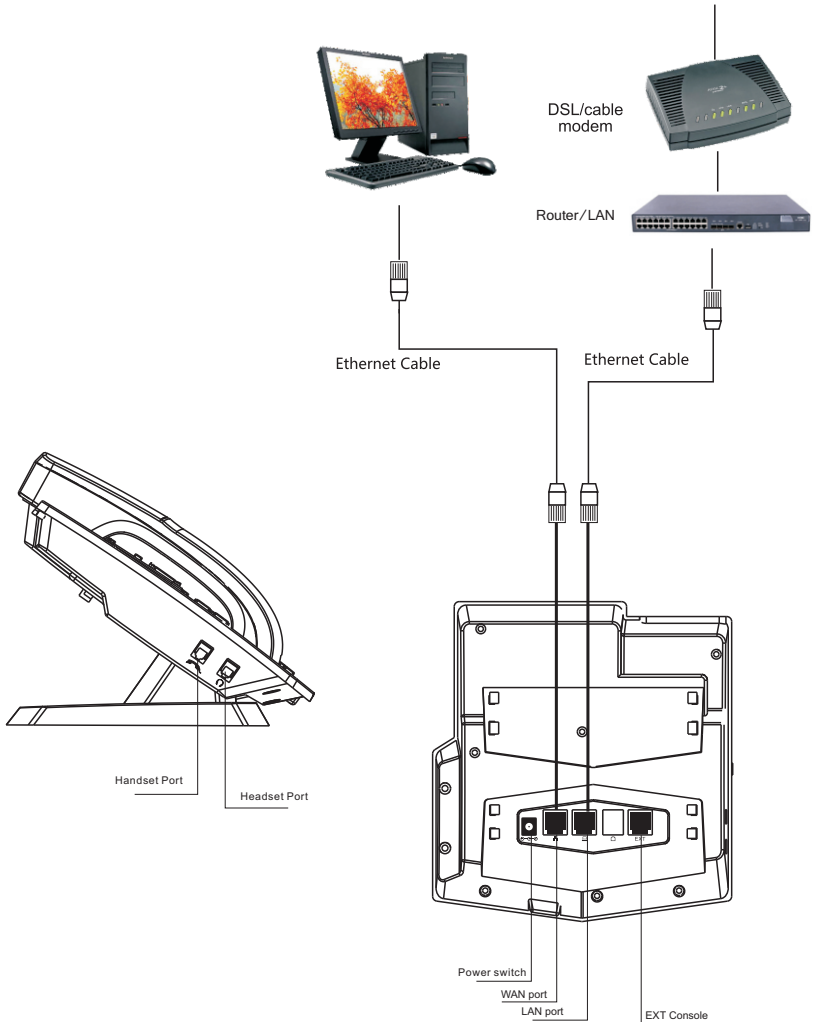


4 IP Phone Setup Menu(1)

Network mode Settings diagram:

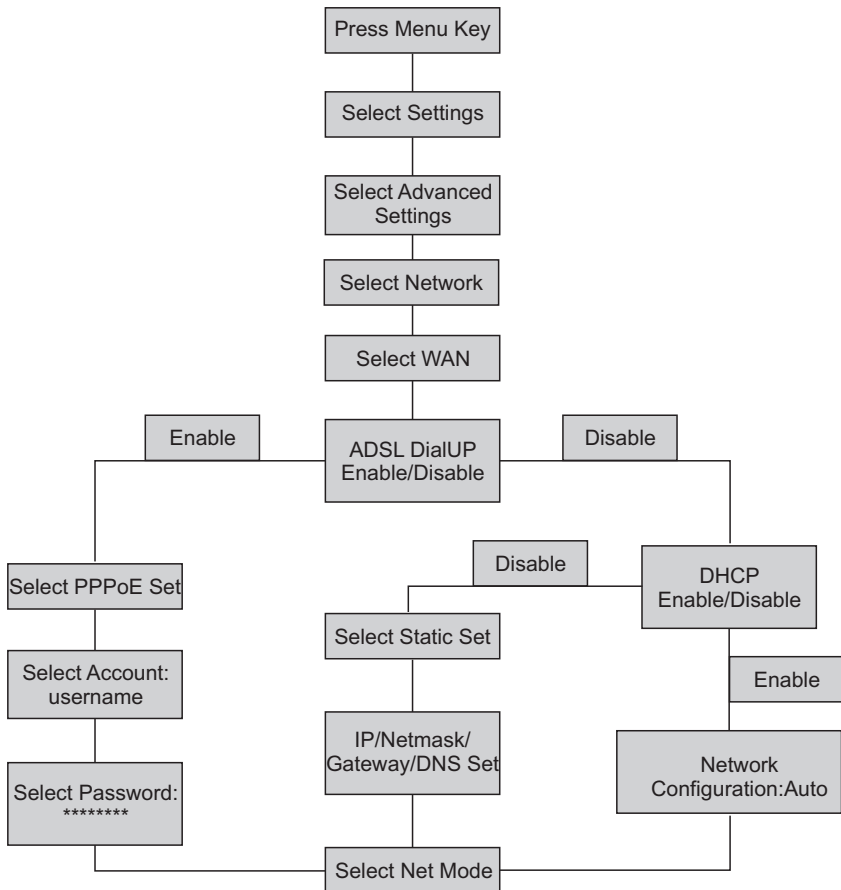

5 IP Phone Setup Menu(2)


The menu of phone Structure:

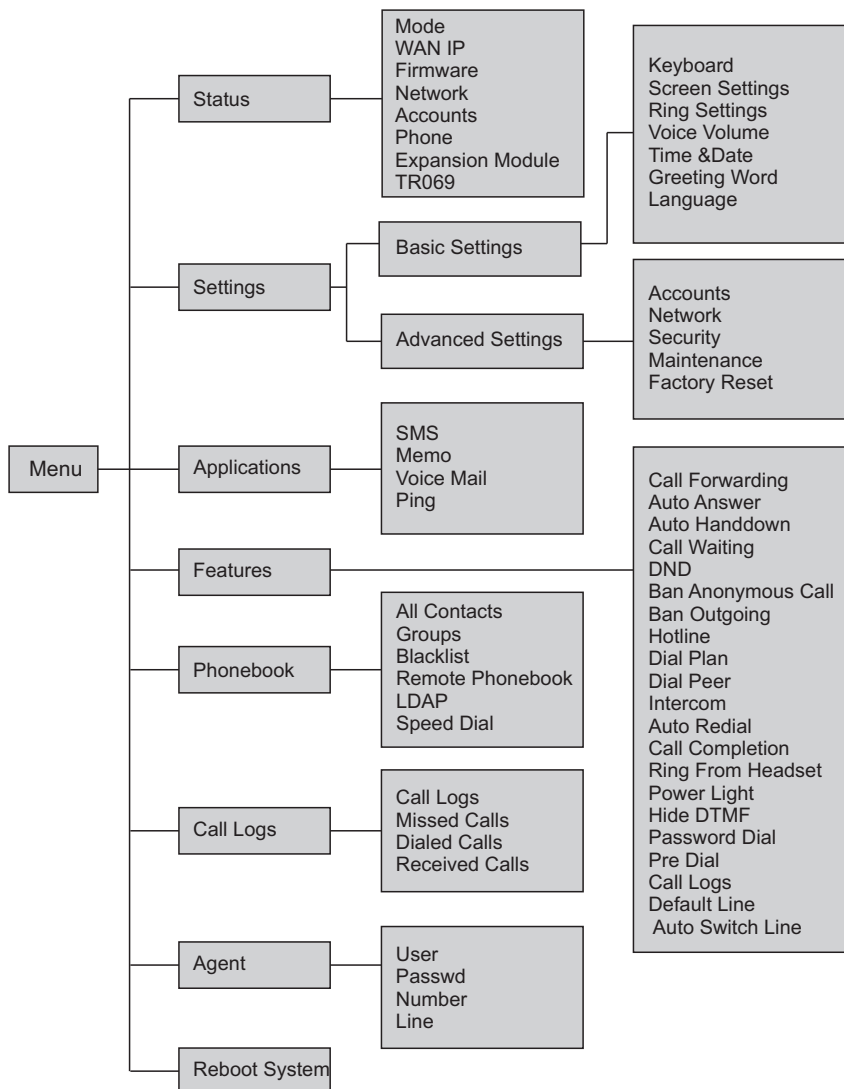


6 Configuration(1)

Web Login

 
The configuration menu of C66 can be accessed using the convenient and userfriendly interface of a web browser.

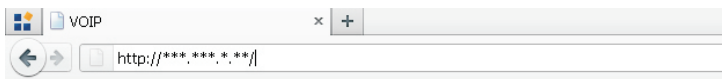

Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g. http://192.168.1.16) to visit the Web page and make some configuration.

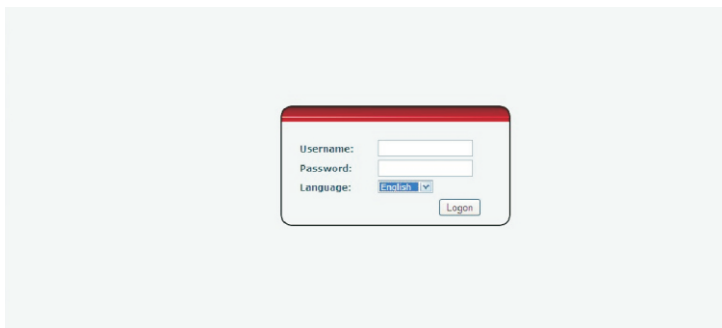

Enter the username and password, and both of the default username and password are "admin". After your logon, the Web page will be displayed as follows.

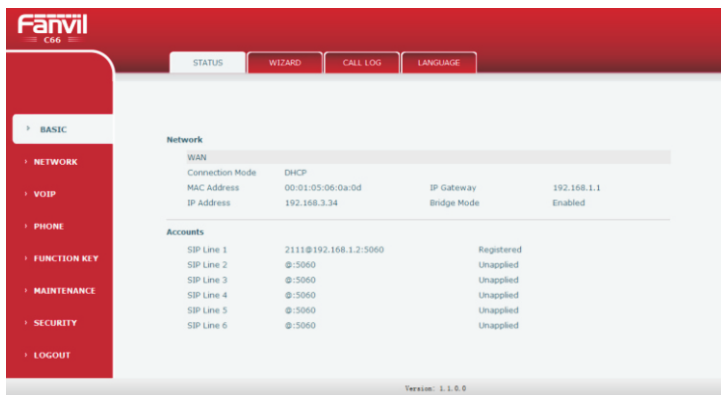

Fanvil C66

STATUS WIZARD CALL LOG LANGUAGE

BASIC

NETWORK

VOIP

PHONE

FUNCTION KEY

MAINTENANCE

SECURITY

LOGOUT

Network

WAN			
Connection Mode	DHCP		
MAC Address	00-01-05-06-0a-0d	IP Gateway	192.168.1.1
IP Address	192.168.3.34	Bridge Mode	Enabled

Accounts

SIP Line 1	2111@192.168.1.2:5060	Registered
SIP Line 2	Q:5060	Unapplied
SIP Line 3	Q:5060	Unapplied
SIP Line 4	Q:5060	Unapplied
SIP Line 5	Q:5060	Unapplied
SIP Line 6	Q:5060	Unapplied

Version: 1.1.0.0

7 Configuration(2)

Network - PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE. (Most DSL users use PPPoE.)

The screenshot shows the Fanvil C66 web interface. The left sidebar contains a menu with options: BASIC, NETWORK (selected), VOIP, PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The top navigation bar has tabs for WAN, QoS&VLAN, SERVICE PORT, and TIME&DATE. The main content area is titled 'WAN Status' and displays the following information:

Active IP Address	192.168.3.34
Current Subnet Mask	255.255.0.0
Current IP Gateway	192.168.1.1
MAC Address	00:01:05:06:0a:0d
MAC Timestamp	2012-12-21

Below this is the 'WAN Settings' section. It includes a dropdown menu for 'Obtain DNS Server Automatically' set to 'Enabled'. There are radio buttons for 'Static IP' (unselected) and 'DHCP' (selected). The 'PPPoE' radio button is also present and selected. The 'Static IP' section has input fields for 'Service Name' (containing 'ANY'), 'User' (containing 'user123'), and 'Password' (containing '*****'). An 'Apply' button is located at the bottom of the settings section. The version number 'Version: 1.1.0.0' is visible at the bottom right.

Network - Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

The screenshot shows the Fanvil C66 web interface with the 'NETWORK' menu item selected. The 'WAN Status' section is identical to the previous screenshot. In the 'WAN Settings' section, the 'Static IP' radio button is selected, and the 'DHCP' radio button is unselected. The 'PPPoE' radio button is also unselected. The 'Static IP' section has input fields for 'IP Address' (192.168.1.179), 'Subnet Mask' (255.255.255.0), 'IP Gateway' (192.168.1.1), 'DNS Domain' (empty), 'Primary DNS' (202.96.134.133), and 'Secondary DNS' (202.96.128.68). An 'Apply' button is located at the bottom of the settings section. The version number 'Version: 1.1.0.0' is visible at the bottom right.

8 Configuration(3)

Network - DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

The screenshot shows the Fanvil C66 web interface. The left sidebar contains a menu with options: BASIC, NETWORK, VOIP, PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The 'NETWORK' menu item is selected. The main content area has tabs for WAN, QoS&VLAN, SERVICE PORT, and TIME&DATE. The 'WAN' tab is active, displaying 'WAN Status' and 'WAN Settings'. The 'WAN Status' section shows: Active IP Address (192.168.3.34), Current Subnet Mask (255.255.0.0), Current IP Gateway (192.168.1.1), MAC Address (00:01:05:06:0a:0d), and MAC Timestamp (2012-12-21). The 'WAN Settings' section includes: Obtain DNS Server Automatically (Enabled), Enable Vendor Identifier (Disabled), Vendor Identifier (Fanvil C66), Static IP (radio button), DHCP (radio button, selected), and PPPoE (radio button). An 'Apply' button is located below the settings. At the bottom, it says '802.1X Settings' and 'Version: 1.1.0.0'.

SIP Settings

Select SIP settings from the main menu. The follow fields such as Server Address Server Port, Authentication User Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

The screenshot shows the Fanvil C66 web interface. The left sidebar contains a menu with options: BASIC, NETWORK, VOIP, PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The 'VOIP' menu item is selected. The main content area has tabs for SIP, STUN, and DIAL PEER. The 'SIP' tab is active, displaying 'SIP Line' (SIP 1) and 'Basic Settings >>'. The 'Basic Settings' section includes: Status (Registered), Server Address (192.168.1.2), Server Port (5060), Authentication User (2111), Authentication Password (****), SIP User (2111), Display Name (2111), Enable Registration (checked), Domain Realm, Proxy Server Address, Proxy Server Port, Proxy User, Proxy Password, Backup Proxy Server Address, Backup Proxy Server Port (5060), and Server Name. There are also sections for 'Codecs Settings >>' and 'Advanced SIP Settings >>'. An 'Apply' button is located below the settings. At the bottom, it says 'Version: 1.1.0.0'.

Server Address

Server Port

Authentication User

Authentication Password

SIP user

SIP server address

SIP server port number

Username for logging into the SIP server

Password for logging into the SIP server

SIP phone number



Make a Phone Call

IP Address:

1. Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial IP address.

For example: Input #192.168.0.1# in the dialer interface, will call the device whose IP address is 192.168.0.1.

SIP Number:

Note: You have to register with SIP server to use SIP number.

1. Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial SIP number.

For example: Input 1866

3. Press "#" button or wait until the timer expires.

