

X6 DSSkey Icon Color Switch Instructions

Version: <1.0>

Date: <2018-7-30>



Catalog

Catalog	1
Introduction	2
1.1 Summary	
1.2 Applicable Models	2
1.3 Glossary	2
2 DSSkey Icon Usage Instructions	3
2.1 Custom Icon	3
2.2 Upgrade Icon	4
2.2.1 Upgrade Methods	4
2.2.2 Upgrade Format	6

Introduction

1.1 Summary

In order to meet the customer's demand for DSSkey icons of different colors, the phone has built-in icons of five different colors for customers to choose from and supports custom icons.

1.2 Applicable Models

This document is applicable to the Fanvil X6 model.

1.3 Glossary

DSSkey Programmable keys, users can customize the type of settings, support BLF/ Speed dial /Intercom and so on.

2 DSSkey Icon Usage Instructions

2.1 Custom Icon

Users can set icon color on phone web page and LCD, including *Blue, Green, Yellow, Red and Purple,* Custom.

Among them, Green, Blue, Yellow, Red, and Purple are the built-in icon color of the phone for users to choose from. At the same time, support the website upgrade icon Custom to meet the needs of customers to change the icon.

Website Function key->Function key->Icon Color, choose the color of the settings type, default color to be green.

Fanvil								
	Function Ke	ey E	ХТ Кеу	Softkey	Advanced]		
> System								
> Network	Function Ke	y Settings Transfer M	ode Make a	New (🔻	Dsskey Home Pag	je: None ▼		
> Line	Page1	Page2	Page3 Page	Page5	Apply		Delete Add New	/ Page
> Phone settings	Key	Туре	Name	Value	Subtype	Line	PickUp Number	Icon Color
	Key 1	•			None 🔻	258456@SIP •		Default Greer 🔻
> Phonebook	Key 2	•			None 🔻	258364@SIP •		Default Greer 🔻
	DSS Key 3 Line	•			None 🔻	5506@SIP3 •		Default Greer 🔻
› Call logs	DSS Key 4 Line	•			None 🔻	SIP4 T		Default Greer 🔻
> Function Key	DSS Key 5 Line	•			None 🔻	SIP5 •		Default Greer 🔻
	DSS Key 6 Non	e 🔻			None 🔻	AUTO 🔻		Default Greer 🔻
> Application	DSS Key 7 Key I	Event 🔻			MWI 🔻	AUTO 🔻		Default Greer 🔻
	DSS Key 8 Key I	Event 🔻			Headset 🔻	AUTO 🔻		Default Greer 🔻
> Security	DSS Non	e v			None 🔻	AUTO 🔻		Default Greer 🔻
> Device Log	DSS Key Non 10	e 🔻		http:		AUTO •		Default Greer 🔻
	DSS Key URL 11	Ŧ		123	None 🔻	AUTO 🔻		Default Greer 🔻
	Key Non 12	e v			None •	AUTO 🔻		Default Greer 🔻
					Apply			

Long press LCD DSSkey button can enter the corresponding settings interface to set up.

Dsskey	• • •		18 : 01
1. Dsskey	11		<>
2. Type	BLF	List	<>
3. Name			
4. Dsskey Th	neme Yello	w	$\langle \rangle$
Return	Left	Right	ОК

When users choose Custom Custom, they need to upgrade their custom icons firstly. See details <u>2.2 Ugprade Icon</u>

2.2 Upgrade Icon

Icon upgrade supports page upgrade and automatic upgrade. The upgrade formats are ".png" and ".tar.gz"

2.2.1 Upgrade Methods

1) Web page upgrade

Website System->Upgrade->DSSkey Icons Upgrade can be upgraded to customize the DSSkey Icon. The upgrade icon will be displayed on the DSS Key Icons List.

Information	Account	Configurations	Upgrade	Auto Provision	Tools	Reboot Phone
	Load	d Server File:		Select	(*.wa	v) Upload
Ring List 🕝						
	Index		File Name		File Size	2
						Delete
Background Upg	rade 🕜					
	Load	d Server File:		Select	(*.bm	p) Upload
Background List	0					
	Index		File Name		File Size	2
		us	er_define_back_grou	ind.bmp	391736By	tes
						Delete
DSS Key Icons I	Jpgrade					
	Load	l Server File:		Select	(*.pn Up	g,*.tar.gz) load
DSS Key Icons I	ist					
	Index		File Name		File Size	2
			custom_dss_edit.p	ing	1817Byt	25
						Delete

Note: the format of the icon should be set according to the format given in this document.

2) Automatic upgrade

Add URL : "Auto Etc Url" to the <AUTOUPDATE CONFIG MODULE> module in the configuration file. Support http/https/ftp/tftp Server.

For example:

Auto Etc Url : ftp://user: password@Server address/Picture name.png.

Auto Etc Url : tftp://172.16.7.29/xxx.png (xxx.tar.gz).

<auto Auto</auto 	OUPDATE Pbook	CONFIG Url	MODULE> :tftp://172.16.7.29/500.xml
Auto	etc Url	-	:tftp://172.16.7.29/1234.tar.gz
< <eni< td=""><td>OF FII</td><td>E>></td><td></td></eni<>	OF FII	E>>	

2.2.2 Upgrade Format

1) Single Icon upgrade (.png)

Name the ready-made icon xxx.png (For example: custom_dss_blflist.png)

Туре	Size	Bit Depth	Format	Name of the Upgrade
				DSSkey
BLF List Key	42*42	32	png	custom_dss_blflist
DTMF	42*42	32	png	custom_dss_dtmf
None	42*42	32	png	custom_dss_edit
Key Event	42*42	32	png	custom_dss_keyevent
Line	42*42	32	png	custom_dss_line
MCAST	42*42	32	png	custom_dss_mcast
Memory Key->BLF/AXFER	42*42	32	png	custom_dss_mem_axfer
Memory Key->BLF/BXFER	42*42	32	png	custom_dss_mem_bxfer
Memory Key->Call Park	42*42	32	png	custom_dss_mem_callpark
Memory Key->Call Forward	42*42	32	png	custom_dss_mem_cfw
Memory Key->BLF/CONF	42*42	32	png	custom_dss_mem_conf
Memory Key->BLF/DTMF	42*42	32	png	custom_dss_mem_dtmf
Memory Key->Intercom	42*42	32	png	custom_dss_mem_intercome
Memory Key->MWI	42*42	32	png	custom_dss_mem_mwi
Memory Key->None	42*42	32	png	custom_dss_mem_none
Memory Key->BLF/New Call	42*42	32	png	custom_dss_mem_newcall
Memory Key->Present	42*42	32	png	custom_dss_mem_present
Memory Key->Speed Dial	42*42	32	png	custom_dss_mem_spdial
URL/Action URL	42*42	32	png	custom_dss_url

2) Package upgrade (.tar.gz)

When users want to upgrade multiple icons, they can be packaged and upgraded.

Packaging format: xxx.tar.gz, Support custom naming.

1) Linux Package xxx.tar.gz

Put the packaged files in a directory and pack them with the packaging tool that supports the tar command.

For example Ubuntu: etc. tar.gz

Command: tar - zcvf etc. tar.gz xxx.png xxx1.png

2) Windows Package xxx.tar.gz

Using 7-Zip compression tool

 Select the file to be packaged, right-click the mouse button, click "7-Zip", "Add to the compressed package" compression format, select "tar" click OK button to generate etc. tar file. Figure:

Archive: C:\Users\syg\Desktop etc.tar	p\		~ · · · ·
Archive <u>format</u> :	ar v	Update mode:	Add and replace files \sim
Compression level:	Store \checkmark	Path mode:	Relative pathnames ~
Compression <u>m</u> ethod:	~	Options	
Dictionary size:	~	Compress shared file	s
Word size:	~	Delete files after com	pression
Solid Block size:	~	Encryption	
Number of CPU threads:	~ /4	Enter <u>p</u> assword:	
Memory usage for Compressing:	1 MB	Reenter password:	
Memory usage for Decompressing:	1 MB		
Split to <u>v</u> olumes, bytes:		Show Password	
Parameters:		Encryption method:	\sim
NTFS	r	06	nel Help

2) Then right-click on the etc. tar file and click on the "7-Zip", "Add to the Compression Pack" compression format in turn. Select the "gzip" click OK button to generate the etc. tar. GZ file, as shown in:

chive: etc.tar.gz				<u> </u>
chive <u>f</u> ormat:	gzip	~	<u>U</u> pdate mode:	Add and replace files
ompression <u>l</u> evel:	Normal	\sim	Path mode:	Relative pathnames
ompression <u>m</u> ethod:	Deflate	\sim	Options Create SFX arc	hive
ictionary size:	32 KB	\sim	Compress share	ed files
<u>/</u> ord size:	32	\sim	Delete files after	er compression
olid Block size:		\sim	Encryption	
Number of CPU threads:	\sim	/4	Enter password:	
Memory usage for Compress	ing:	3 MB	Roomtor possured	
Memory usage for Decompre	essing:	2 MB		
Split to <u>v</u> olumes, bytes:			Show Passwor	d
arameters.			Encryption method	d: ~