

C58/C58P

VoIP Phone



WWW.FANVIL.COM

VoIP Phone C58/C58P Quick Installation Guide



Fanvil

Smart VoIP

This phone can be setted through the LCD or web page.
If you own this product to make some VoIP calls, an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.

Check Your Package Contents

These are the items included with your C58/C58P IP Phone purchase:



VoIP Phone C58/C58P



Handset



Power adaptor



Handset cord



Quick Installation Guide




Base bracket



Ethernet Cable

2 The Appearance of Product

Front view and keypad function:

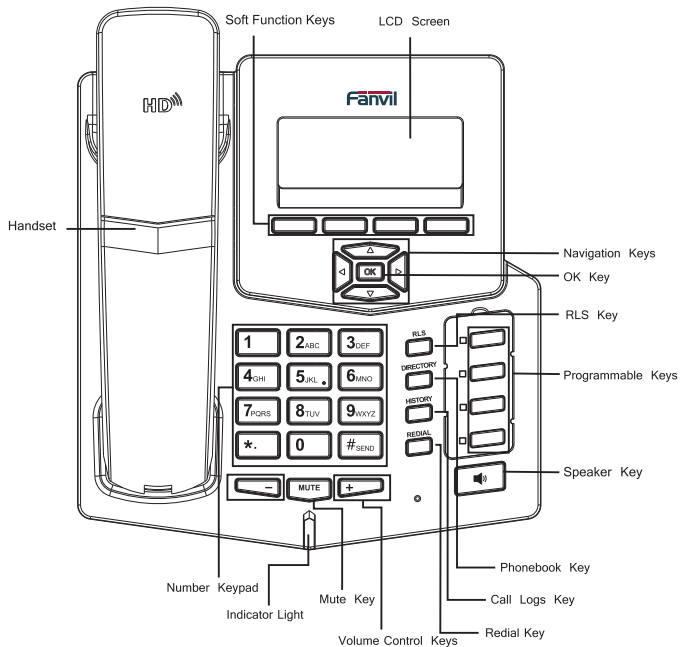


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

Key	Text Mode		Key	Text Mode	
	Normal(ABC)	Numeric(0-9)		Normal(ABC)	Numeric(0-9)
1		1	7 _{PQRS}	PQRSpqrs	7
2 _{ABC}	ABCabc	2	8 _{TUV}	TUVtuv	8
3 _{DEF}	DEFdef	3	9 _{WXYZ}	WXYZwxyz	9
4 _{GHI}	GHIghi	4	0		0
5 _{JKL}	JKLjkl	5	*.	#@,./:;%& ()<>[]~!_ =+~?	*
6 _{MNO}	MNOmno	6	# _{SEND}		#


3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

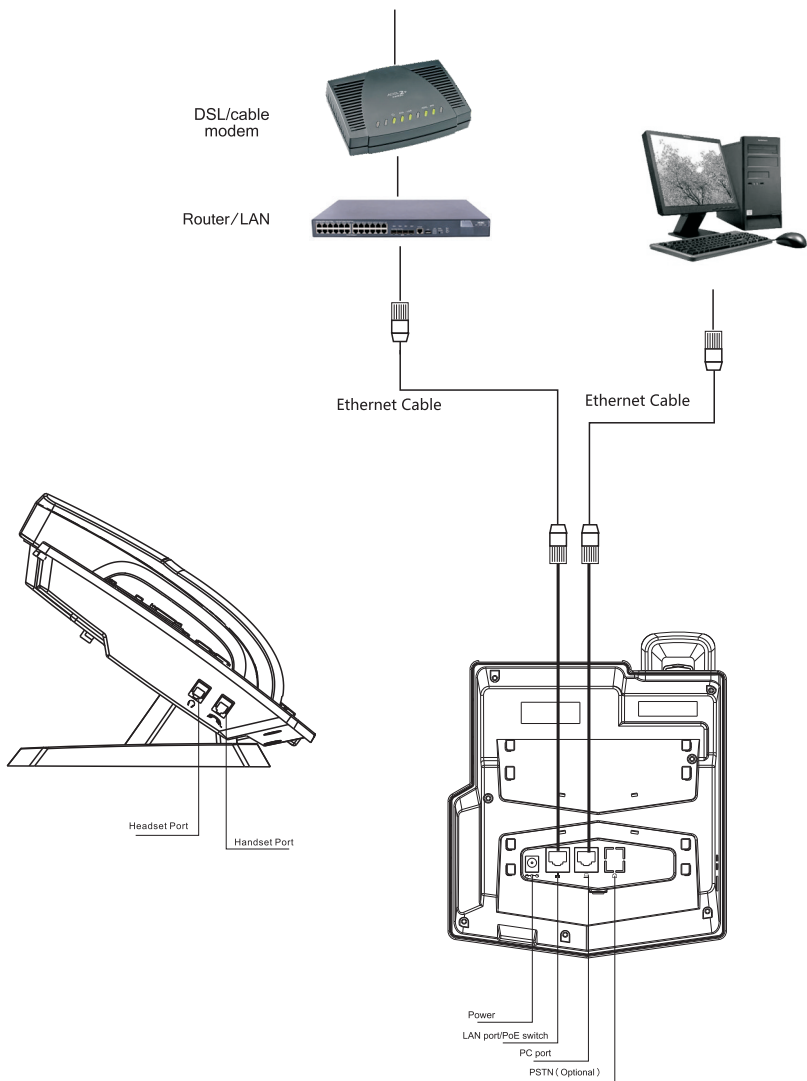


4 IP Phone Setup Menu(1)

Network mode Settings diagram:

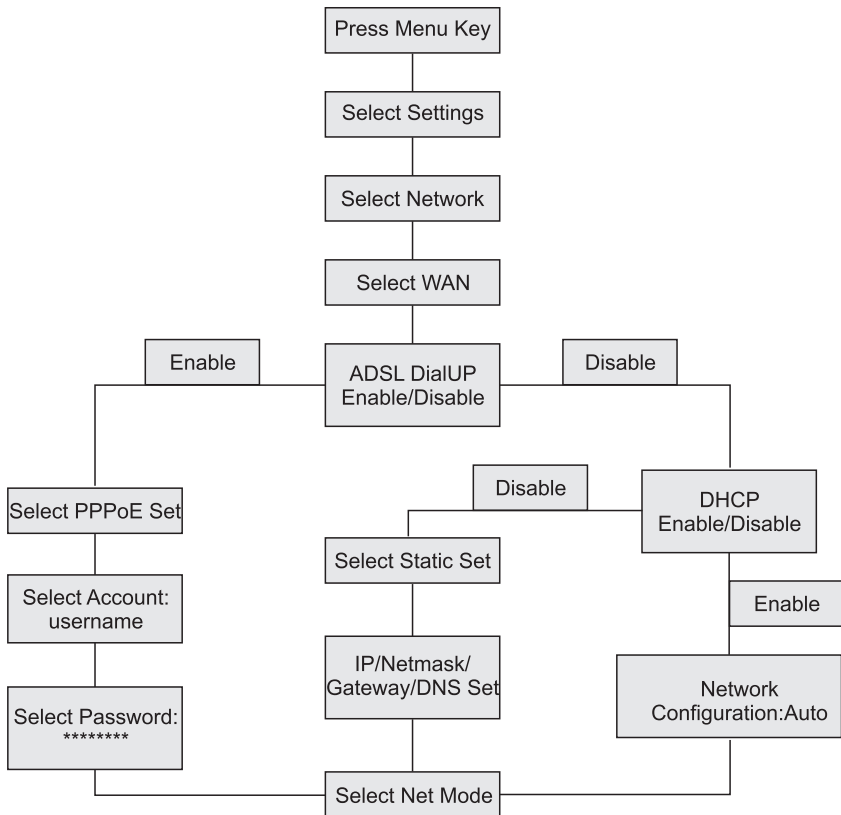

5 IP Phone Setup Menu(2)

The menu of phone Structure:

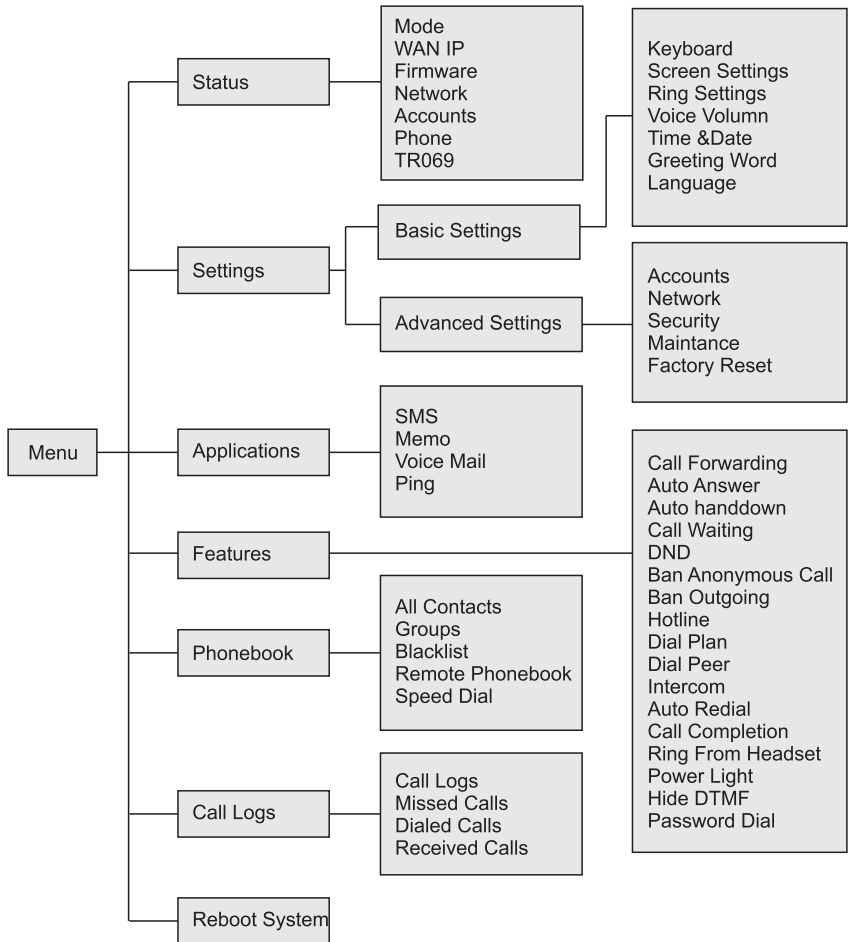

6 Configuration(1)

Web Login


The configuration menu of C58/C58P can be accessed using the convenient and user-friendly interface of a web browser.



Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g. http://192.168.1.16) to visit the Web page and make some configuration.



Enter the username and password, and both of the default username and password are "admin". After your login, the Web page will be displayed as follows.

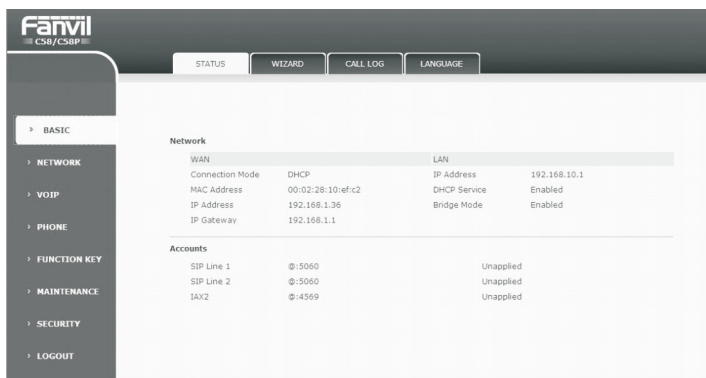

7 Configuration(2)

Network - PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE. (Most DSL users use PPPoE.)

The screenshot shows the Fanvil web interface for network configuration. The 'NETWORK' menu is selected. The 'WAN' tab is active, displaying the following settings:

WAN Status	
Active IP Address	192.168.1.36
Current Subnet Mask	255.255.255.0
Current IP Gateway	192.168.1.1
MAC Address	00:02:28:10:ef:c2
MAC Timestamp	2012-4-5

Below the status section, the 'WAN Settings' are configured for PPPoE:

- Obtain DNS Server Automatically: Enabled
- Static IP: DHCP: PPPoE:
- Service Name:
- User:
- Password:

An 'Apply' button is located below the PPPoE settings.

The '802.1X Settings' section is also visible:

- User:
- Password:
- Enable 802.1X:

An 'Apply' button is located below the 802.1X settings.

Network - Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

The screenshot shows the Fanvil web interface for network configuration. The 'NETWORK' menu is selected. The 'WAN' tab is active, displaying the following settings:

WAN Status	
Active IP Address	192.168.1.36
Current Subnet Mask	255.255.255.0
Current IP Gateway	192.168.1.1
MAC Address	00:02:28:10:ef:c2
MAC Timestamp	2012-4-5

Below the status section, the 'WAN Settings' are configured for Static IP:

- Static IP: DHCP: PPPoE:
- IP Address:
- Subnet Mask:
- IP Gateway:
- DNS Domain:
- Primary DNS:
- Secondary DNS:

An 'Apply' button is located below the Static IP settings.

The '802.1X Settings' section is also visible:

- User:
- Password:
- Enable 802.1X:

An 'Apply' button is located below the 802.1X settings.

8 Configuration(3)

Network - DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

The screenshot shows the Fanvil C50/C50P web interface. The top navigation bar includes tabs for WAN, LAN, QoS/VLAN, SERVICE PORT, DHCP SERVICE, and TIME/DATE. The left sidebar contains menu items: BASIC, NETWORK, VOIP, PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The main content area is titled 'WAN Status' and displays the following information:

Active IP Address	192.168.1.36
Current Subnet Mask	255.255.255.0
Current IP Gateway	192.168.1.1
MAC Address	00:02:28:10:ef:c2
MAC Timestamp	2012-4-5

Below this is the 'WAN Settings' section:

Obtain DNS Server Automatically: Enabled

Static IP: DHCP:

The '802.1X Settings' section includes:

User:

Password:

Enable 802.1X:

SIP Settings

Select SIP settings from the main menu. The follow fields such as Server Address, Server Port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

The screenshot shows the Fanvil C50/C50P web interface with the 'SIP' tab selected. The left sidebar is the same as in the previous screenshot. The main content area is titled 'SIP Line' and shows 'SIP 1' selected in a dropdown menu. Below this is the 'Basic Settings >>' section:

Status	Registered	Domain Realm	<input type="text"/>
Server Address	<input type="text" value="192.168.1.2"/>	Proxy Server Address	<input type="text"/>
Server Port	<input type="text" value="5060"/>	Proxy Server Port	<input type="text"/>
Authentication User	<input type="text" value="4210"/>	Proxy User	<input type="text"/>
Authentication Password	<input type="password" value="*****"/>	Proxy Password	<input type="text"/>
SIP User	<input type="text" value="4210"/>	Backup Server Address	<input type="text"/>
Display Name	<input type="text"/>	Backup Server Port	<input type="text"/>
Enable Registration	<input checked="" type="checkbox"/>	Server Name	<input type="text"/>

Below this are sections for 'Codescs Settings >>', 'Advanced SIP Settings >>', and 'SIP Global Settings >>'. An 'Apply' button is located at the bottom right of the 'Advanced SIP Settings' section.

Server Address
Server Port
Authentication User
Authentication Password
SIP user

SIP server address
SIP server port number
Username for logging into the SIP server
Password for logging into the SIP server
SIP phone number



Make a Phone Call

IP Address:

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial IP address.

For example: Input #192.168.0.1# in the dialer interface, you will call the device whose IP address is 192.168.0.1.

SIP Number:

Note: You have to register with SIP server to use SIP number.

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
- 2.Dial SIP number.

For example: Input 1866

- 3.Press "#" button or wait until the timer expires.

